

Panasonic®

Installation Manual

Additional Digital Cordless Handset

Model No. **KX-TGA740**



DECT
6.0

Thank you for purchasing a Panasonic product.

This unit is an additional handset compatible with the following series of Panasonic Digital Cordless Phone:
KX-TG6411/KX-TG6421/KX-TG6431/KX-TG6441/
KX-TG7431

You must register this handset with your base unit before it can be used. This installation manual describes only the steps needed to register and begin using the handset. Please read the base unit's operating instructions for further details.

Charge the batteries for about 7 hours before initial use.

Please read this installation manual before using the unit and save it for future reference.

For assistance, visit our website:
<http://www.panasonic.com/help>
for customers in the U.S.A. or
Puerto Rico.



TGA740

PNQX1650ZA DM1108DW0

Accessory information

Supplied accessories

Accessory item/Order number	Quantity
Charger/PNWETGA740B	1
AC adaptor/PQLV219Z	1
Rechargeable batteries/HHR-4DPA (Part No. HHR-65AAABU or N4DHYY00002)	2
Handset cover*1/PNYNTGA641TR	1
Belt clip/PNKE1029Z1	1


*1 The handset cover comes attached to the handset.

Note:

- Please read the base unit's operating instructions for additional/replacement accessories.

Setting up

Connections

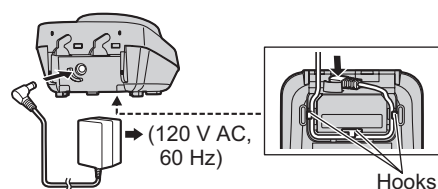

Note:

- Use only the supplied Panasonic AC adaptor PQLV219.
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)

2 For assistance, please visit <http://www.panasonic.com/help>


Battery installation/Battery charge

Important:

- Use the supplied rechargeable batteries. For replacement, we recommend using the Panasonic rechargeable batteries noted on page 2.
- Wipe the battery ends (\oplus , \ominus) with a dry cloth.
- Avoid touching the battery ends (\oplus , \ominus) or the unit contacts.
- Confirm correct polarities (\oplus , \ominus).
- USE ONLY Ni-MH batteries AAA (R03) size.
- Do NOT use Alkaline/Manganese/Ni-Cd batteries.

Charge for about 7 hours.


- When the batteries are fully charged, the charge indicator goes off.

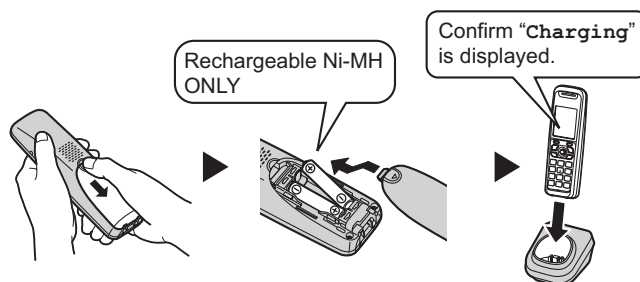

Note:

- If the batteries are fully charged, but the operating time seems to be shorter, clean the battery ends (\oplus , \ominus) and the charge contacts with a dry cloth and charge again.

Controls

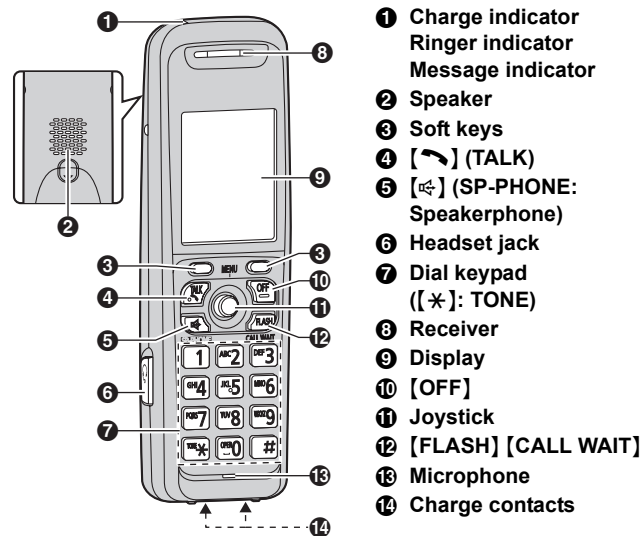

- ❶ Charge indicator
Ringer indicator
Message indicator
- ❷ Speaker
- ❸ Soft keys
- ❹ [TALK]
- ❺ [SP-PHONE:
Speakerphone]
- ❻ Headset jack
- ❼ Dial keypad
([*]: TONE)
- ❽ Receiver
- ❾ Display
- ❿ [OFF]
- ⓫ Joystick
- ⓬ [FLASH] [CALL WAIT]
- ⓭ Microphone
- ⓮ Charge contacts

Registering a handset to a base unit

1 Base unit:

■ KX-TG6411 series

Press and hold [LOCATOR] for about 4 seconds. (No registration tone)

■ KX-TG6421/KX-TG6431/KX-TG6441/KX-TG7431 series

Press and hold [LOCATOR] for about 4 seconds until the registration tone sounds.

- If all registered handsets start ringing, press the same button to stop. Then repeat this step.
- The next step must be completed within 90 seconds.

2 Handset:

Press **[OK]**, then wait until a long beep sounds.

Note:


- If an error tone sounds, or if Ψ is still displayed, register the handset according to the base unit's operating instructions.

Display language

- 1 **[MENU]** (center of joystick) → **[#][1][1][0]**
- 2 **[▼]/[▲]**: Select the desired setting.
- 3 Press down the center of the joystick to save. → **[OFF]**

Belt clip

■ To attach

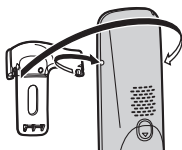


■ To remove



Wall mounting

- 1 Drive the screws (not supplied) into the wall.
- 2 Mount the charger (1), then slide it down (2) and to the right (3) until it is secure.

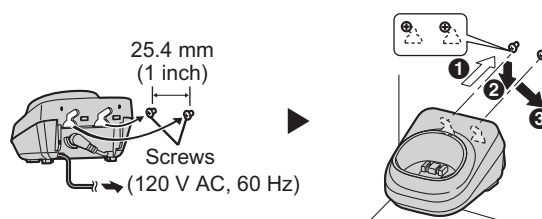

For assistance, please visit <http://www.panasonic.com/help>

For KX-TG6411/KX-TG6421/KX-TG6431/ KX-TG6441 series users: Available handset feature overview

Main feature differences


Feature	KX-TGA740	KX-TGA641
Description	Same type of handset supplied with KX-TG7431series	Same type of handset supplied with KX-TG6411/KX-TG6421/KX-TG6431/KX-TG6441 series
Display size	2.1 inches	1.8 inches
Control type (page 7)	3 soft keys (Middle soft key: Center of joystick)	3 soft keys
	Joystick (Up/down/left/right)	Navigator key/ ▲ (Volume) key (Up/down)
Display mode (page 8)	●	—
Message list (page 9)	●	—

Note:


- For some features, the operations are slightly different from the descriptions in the KX-TG6411/KX-TG6421/KX-TG6431/KX-TG6441 series base unit's operating instructions (page 10).

Control type

■ KX-TGA740

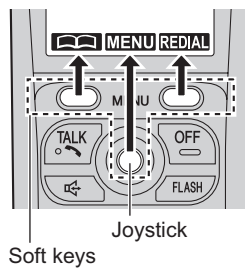

■ KX-TGA641

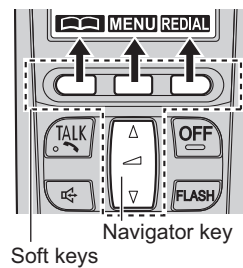

Function	KX-TGA740	KX-TGA641
Using soft keys	Left, center of joystick ^{*1} , right	Left, middle, right
Scrolling through various lists or items	[▼]/[▲] ^{*2}	[▼]/[▲]
Adjusting the receiver or speaker volume: – while talking – while listening to messages	[▼]/[▲] ^{*2}	[▼]/[▲]
Moving the cursor (right or left) to edit number or name	[▶]/[◀] ^{*3}	[▼]/[▲]
Skipping or repeating during message playback	[▶]/[◀] ^{*4}	—

^{*1} Pressing down the center of the joystick.

^{*2} Pushing the joystick down or up.

^{*3} Pushing the joystick right or left.

 






^{*4} To skip messages, push the joystick right.
To repeat messages, push the joystick left.

Display mode

You can select to display either a single item or multiple items on one screen at a time for the following features:

 - menu list, phonebook list, caller list, redial list, message list, and call block list
- handset top menu icons in function menu

The following icons are shown when you press down on the center of the joystick in standby mode.

Icon	Feature	Icon	Feature
	Caller list		Intercom
	Set date / time ^{*1}		Initial setting
	Answering device ^{*2}		Customer support
	V.M. access		

^{*1} KX-TG6411 series

^{*2} KX-TG6421/KX-TG6431/KX-TG6441/KX-TG7431 series

The display mode can be switched temporarily or set by programming.

■ Switching temporarily:

You can temporarily switch the display mode as follows by pressing the right soft key shown when viewing the lists or selecting menu icons:

- **[MULTI]**: Multiple entries/all menu icons are shown on one screen at a time.
- **[SINGLE]**: An entry/a menu icon is shown on one screen in large characters at a time.

Note:

- When "Multi items" is selected as the display mode, you can switch the screen to confirm the detailed information by pressing **[SINGLE]**.

■ By programming:

You can set the unit to always show a single item or multiple items beforehand by selecting "Single item" or "Multi items" as the display mode setting.

Select the desired setting:

- “**Multi items**”: Multiple entries/all menu icons are shown on one screen at a time.
- “**Single item**”: An entry/a menu icon is shown on one screen in large characters at a time.

The default setting is “**Multi items**”.

1 [MENU] (center of joystick) → **[⇐][1][9][2]**

2 [▼]/[▲]: Select the desired setting. → **[SAVE]**

3 [OFF]

Note:

- When **[MULTI]** or “**Multi items**” is selected as the display mode, you can move screens by pushing the joystick right or left, without scrolling down or up through the list:
 - Push the joystick right to go to the next screen.
 - Push the joystick left to return to the previous screen.

Listening to messages using the handset

Listening to messages from the message list

You can select the item to play back.

1 [MENU] (center of joystick) → **[⇐][3][2][9]**

2 [▼]/[▲]: Select the desired item from the message list. → **[PLAY]**

- You can erase the selected message as follows: **[ERASE]** → **[▼]/[▲]**: “**Yes**” → **[SELECT]**

3 When finished, press **[OFF]**.

Note:

- If the item has already been heard, “✓” is displayed, even if it was heard using another handset.
- If the unit cannot receive caller information, “**Msg.**” is displayed in the message list.
- When you play a message from the message list, the playback operations are as shown below:
 - If you press **[1]** or push the joystick left, the currently playing message is played back from the beginning.

- If you press **[2]** or push the joystick right, the unit stops message playback and the display goes back to the message list.

Operational differences for some features

The following features include different operations from the descriptions in the KX-TG6411/KX-TG6421/KX-TG6431/KX-TG6441 series base unit's operating instructions. The differences are described in the boxed text.

Shared phonebook: Searching by first character (alphabetically)

- 1** **[]**
- 2** Press the dial key (**[0]** – **[9]**, **[*]**, or **[#]**) which contains the character you are searching for.
- 3** **[v]/[▲]**: Scroll through the phonebook if necessary.
- 4** **[↶]**

Call block (Caller ID subscribers only): Storing unwanted callers

■ From the caller list:

- 1** **[MENU]** (center of joystick) → **[#][2][1][3]**
- 2** **[v]/[▲]**: Select the entry to be blocked. → **[SELECT]**
 - To edit the number, press **[EDIT]** repeatedly until the phone number is shown in the 10-digit format.
- 3** **[SAVE]**
- 4** **[v]/[▲]**: "Call block" → **[SELECT]**
- 5** **[v]/[▲]**: "Yes" → **[SELECT]** → **[OFF]**

Caller list: Editing a caller's phone number before calling back

- 1** **[MENU]** (center of joystick) → **[#][2][1][3]**
- 2** **[v]/[▲]**: Select the desired entry. → **[SELECT]**
- 3** Press **[EDIT]** repeatedly until the phone number is shown in the desired format.
- 4** **[↶]**

Caller list: Storing caller information to the phonebook

1 **[MENU]** (center of joystick) → **[#][2][1][3]**

2 **[▼]/[▲]**: Select the desired entry. → **[SELECT]**

- To edit the number, press **[EDIT]** repeatedly until the phone number is shown in the desired format.

3 **[SAVE]**

4 **[▼]/[▲]**: “Phonebook” → **[SELECT]**

5 Continue from step 2, “Editing entries”, in the operating instructions.

For your safety

To prevent severe injury and loss of life/property, read this section carefully before using the product to ensure proper and safe operation of your product.

WARNING

Power connection

- Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire.
- Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire.
- Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact the Panasonic Call Center at 1-800-211- PANA (1-800-211-7262).

Installation

- To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture.
- Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.

CAUTION

Installation and relocation

- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.

For assistance, please visit <http://www.panasonic.com/help> 11

Battery

- We recommend using the supplied batteries or additional/replacement batteries noted on page 2 for replacement battery information. **USE ONLY rechargeable Ni-MH batteries AAA (R03) size.**
- Do not mix old and new batteries.
- Do not open or mutilate the batteries. Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin. The electrolyte is toxic and may be harmful if swallowed.
- Exercise care when handling the batteries. Do not allow conductive materials such as rings, bracelets, or keys to touch the batteries, otherwise a short circuit may cause the batteries and/or the conductive material to overheat and cause burns.
- Charge the batteries provided with or identified for use with this product only, in accordance with the instructions and limitations specified in this manual.
- Only use a compatible base unit (or charger) to charge the batteries. Do not tamper with the base unit (or charger). Failure to follow these instructions may cause the batteries to swell or explode.

Attention:



A nickel metal hydride battery that is recyclable powers the product you have purchased.
Please call 1-800-8-BATTERY (1-800-822-8837) for information on how to recycle this battery.

Other information

- Operating the product near electrical appliances may cause interference. Move away from the electrical appliances.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

Routine care

- **Wipe the outer surface of the product with a soft moist cloth.**
- Do not use benzine, thinner, or any abrasive powder.

Notice for product disposal, transfer, or return

- This product can store your private/confidential information. To protect your privacy/confidentiality, we recommend that you erase information such as phonebook or caller list entries from the memory before you dispose of, transfer, or return the product.

12 For assistance, please visit <http://www.panasonic.com/help>

FCC and other information

This equipment is hearing aid compatible as defined by the FCC in 47 CFR Section 68.316.

When you hold the phone to your ear, noise might be heard in your Hearing Aid. Some Hearing Aids are not adequately shielded from external RF (radio frequency) energy. If noise occurs, use an optional headset accessory or the speakerphone option (if applicable) when using this phone. Consult with your audiologist or Hearing Aid manufacturer about the availability of Hearing Aids which provide adequate shielding to RF energy commonly emitted by digital devices.

WHEN PROGRAMMING EMERGENCY NUMBERS AND/OR MAKING TEST CALLS TO EMERGENCY NUMBERS:

- 1) Remain on the line and briefly explain to the dispatcher the reason for the call.
- 2) Perform such activities in the off-peak hours, such as early morning or late evenings.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this phone.

CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Warning:

- This product complies with FCC radiation exposure limits set forth for an uncontrolled environment.
- This handset may not be collocated or operated in conjunction with any other antenna or transmitter.
- The handset may be carried and operated with only the specific provided belt-clip. Other non-tested belt-clips or similar body-worn accessories may not comply and must be avoided.

Notice:

- FCC ID can be found inside the battery compartment or on the bottom of the unit.

Compliance with TIA-1083 standard:

Telephone handsets identified with this logo have reduced noise and interference when used with T-Coil equipped hearing aids and cochlear implants.



Notice

- This product is designed for use in the United States of America. Sale or use of this product in other countries may violate local laws.
- Cet appareil est conçu pour être utilisé aux États-Unis d'Amérique. La vente ou l'emploi de cet appareil dans certains autres pays peut constituer une infraction à la législation locale.
- Este producto está diseñado para usarse en los Estados Unidos de América. La venta o el empleo de este producto en ciertos países puede constituir violación de la legislación local.
- 本產品專為美國使用而設。若在其他國家銷售或使用，可能會違反當地法例。
- この製品は、日本国外での使用を目的として設計されており、日本国内での使用は法律違反となります。従って、当社では日本国内においては原則として修理などのサービスは致しかねます。

IMPORTANT!

If your product is not working properly. . .

- 1. Read this Installation Manual**
- 2. Visit our website: <http://www.panasonic.com/help>**
 - FAQs and troubleshooting hints are available.
- 3. Contact us via the web at:**
<http://www.panasonic.com/contactinfo>
- 4. Call us at: 1-800-211-PANA (1-800-211-7262)**
 - Monday - Friday 9:00am - 9:00pm (EST),
Saturday/Sunday 10:00am - 7:00pm (EST)

To order replacement batteries, call **1-800-332-5368** or visit **<http://www.panasonic.com/batterystore>**

**Panasonic Consumer Electronics Company,
Division of Panasonic Corporation of North America**
One Panasonic Way, Secaucus, New Jersey 07094

Copyright:

This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© Panasonic Communications Co., Ltd. 2008

Panasonic®

Manual de instalación

Auricular Inalámbrico Digital Adicional

Modelo N° **KX-TGA740**



DECT
6.0

Gracias por adquirir un producto Panasonic.

Esta unidad es un auricular adicional compatible con la siguiente serie de teléfonos inalámbricos digitales Panasonic:
KX-TG6411/KX-TG6421/KX-TG6431/KX-TG6441/KX-TG7431
Debe registrar este auricular en su unidad base antes de poder usarlo. Este manual de instalación sólo describe los pasos necesarios para registrar y comenzar a usar el auricular. Lea las instrucciones de operación de la unidad base para obtener más detalles.

Cargue las baterías aproximadamente durante 7 horas antes de usarse por primera vez.

Lea este manual de instalación antes de usar la unidad y guárdelo para consultarlo en el futuro.

Visite nuestro sitio web para obtener ayuda:

<http://www.panasonic.com/help> para clientes de EE. UU. o Puerto Rico (sólo en inglés).

Información de los accesorios

Accesorios que se suministran

Accesorio/Número de pedido	Cantidad
Cargador/PNWETGA740B	1
Adaptador de corriente/PQLV219Z	1
Baterías recargables/ HHR-4DPA (Pieza N° HHR-65AAABU o N4DHYYY00002)	2
Cubierta del auricular ^{*1} /PNYNTGA641TR	1
Sujetador para cinturón/PNKE1029Z1	1


^{*1} La cubierta del auricular viene unida a él.

Nota:

- Lea las instrucciones de operación de la unidad base para obtener información sobre accesorios adicionales o de repuesto.

Instalación

Conexiones

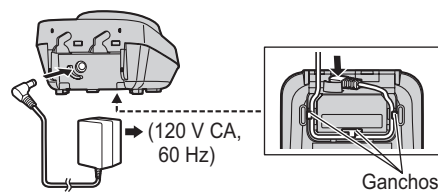

Nota:

- Use sólo el adaptador de corriente Panasonic PQLV219 que se suministra.
- El adaptador de corriente debe permanecer conectado todo el tiempo. (Es normal que el adaptador se caliente durante su uso.)

(2)


Instalación y carga de las baterías

Importante:

- Utilice las baterías recargables que se suministran. Para reemplazarlas, recomendamos el uso de las baterías recargables Panasonic que se especifican en la página 2.
- Limpie los extremos de las baterías (+, -) con un paño seco.
- Evite tocar los extremos de las baterías (+, -) o los contactos de la unidad.
- Confirme que las polaridades estén correctas (+, -).
- UTILICE SÓLO baterías de Ni-MH tamaño AAA (R03).
- NO utilice baterías Alcalinas, de Manganeseo o de Ni-Cd.

Cargue aproximadamente durante 7 horas.

- Cuando las baterías estén completamente cargadas, el indicador de carga se apagará.

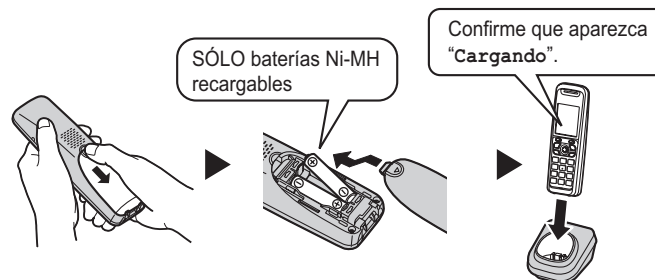

Nota:

- Si las baterías están completamente cargadas pero el tiempo de funcionamiento parece ser más corto, limpie los extremos de las baterías (+, -) y los contactos de carga con un paño seco y cárguelas de nuevo.

Controles



- 1 Indicador de carga
Indicador de timbre
Indicador de mensaje
- 2 Altavoz
- 3 Teclas de función
- 4 [TALK] (TALK: Hablar)
- 5 [SP-PHONE] (SP-PHONE: Altavoz)
- 6 Toma para audífono
- 7 Teclado de marcación
[TONE] (TONE: Tono)
- 8 Receptor
- 9 Pantalla
- 10 [OFF] (Apagado)
- 11 Joystick
- 12 [FLASH]
[CALL WAIT] (Llamada en espera)
- 13 Micrófono
- 14 Contactos de carga

Cómo registrar un auricular a una unidad base

1 Unidad base:

■ Serie KX-TG6411

Oprima y mantenga oprimido [LOCATOR] durante aproximadamente 4 segundos. (No hay tono de registro)

■ Series KX-TG6421/KX-TG6431/KX-TG6441/KX-TG7431

Oprima y mantenga oprimido [LOCATOR] durante aproximadamente 4 segundos hasta que suene el tono de registro.

- Si todos los auriculares registrados comienzan a timbrar, oprima el mismo botón para detenerlos. Después repita este paso.
- El siguiente paso debe completarse en un máximo de 90 segundos.

2 Auricular:

Oprima **[OK]** y espere a que se emita un pitido largo.

Nota:


- Si suena un tono de error, o si **Y** continúa mostrándose, registre el auricular de acuerdo con las instrucciones de operación de la unidad base.

Idioma de la pantalla

- 1 **[MENU]** (centro del joystick) → **[#][1][1][0]**
- 2 **[v]/[▲]**: Seleccione la configuración deseada.
- 3 Oprima hacia abajo el centro del joystick para guardar. → **[OFF]**

Sujetador para cinturón

■ Para colocarlo

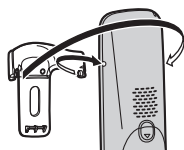


■ Para retirarlo



Montaje en la pared


- 1 Coloque los tornillos (no se suministran) en la pared.
- 2 Monte el cargador (1), y después deslícelo hacia abajo (2) y hacia la derecha (3) hasta que quede seguro.

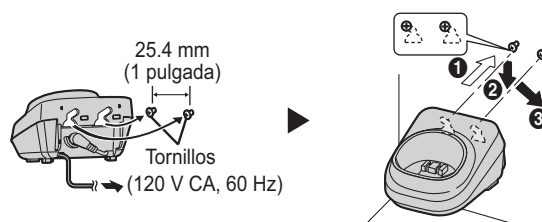

(5)


Para los usuarios de las series KX-TG6411/ KX-TG6421/KX-TG6431/KX-TG6441: Resumen de funciones disponibles del auricular

Principales diferencias en las funciones

Función	KX-TGA740	KX-TGA641
Descripción	Mismo tipo de auricular que se suministra con la serie KX-TG7431	Mismo tipo de auricular que se suministra con las series KX-TG6411/KX-TG6421/KX-TG6431/KX-TG6441
Tamaño de la pantalla	2.1 pulgadas	1.8 pulgadas
Tipo de control (página 7)	3 teclas de función (Tecla de función del medio: Centro del joystick)	3 teclas de función
	Joystick (Arriba/abajo/izquierda/derecha)	Tecla navegadora/Tecla de (Volumen)  (Arriba/abajo)
Modo de pantalla (página 8)	●	—
Lista de mensajes (página 9)	●	—


Tipo de control

■ KX-TGA740

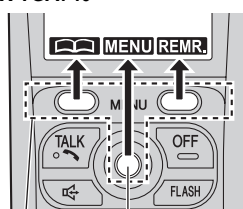

Joystick
Teclas de función

■ KX-TGA641

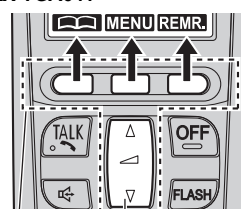

Tecla navegadora
Teclas de función

Función	KX-TGA740	KX-TGA641
Uso de las teclas de función	Izquierda, centro del joystick ^{*1} , derecha	Izquierda, del medio, derecha
Navegación por diversas listas o elementos	[▼]/[▲] ^{*2}	[▼]/[▲]
Ajuste del volumen del receptor o el altavoz: – mientras habla – mientras escucha mensajes	[▼]/[▲] ^{*2}	[▼]/[▲]
Cómo mover el cursor (de derecha a izquierda) para editar números o nombres	[▶]/[◀] ^{*3}	[▼]/[▲]
Cómo omitir o repetir un mensaje durante la reproducción	[▶]/[◀] ^{*4}	—

^{*1} Presionando el centro del joystick

^{*2} Empujando el joystick hacia arriba o abajo

^{*3} Empujando el joystick hacia la derecha o la izquierda

^{*4} Para omitir mensajes, empuje el joystick a la derecha.
Para repetir mensajes, empuje el joystick a la izquierda.

Modo de pantalla

Puede seleccionar ver uno o múltiples elementos en una pantalla a la vez para las siguientes funciones:

- lista del menú, lista del directorio telefónico, lista de personas que llamaron, lista de remarcación, lista de mensajes y lista de bloqueo de llamadas
- iconos del menú superior del auricular en el menú de funciones

Los siguientes iconos se muestran al oprimir el centro del joystick en modo en espera.

Icono	Función	Icono	Función
	Lista de Llamada		Intercom
	Aj. Fecha / Hora ^{*1}		Ajuste inicial
	Contestadora ^{*2}		Ayuda al cliente
	Acceso a M.V.		

*1 Serie KX-TG6411

*2 Series KX-TG6421/KX-TG6431/KX-TG6441/KX-TG7431

El modo de pantalla puede cambiarse temporalmente o configurarse por medio de la programación.

■ Para cambiarlo temporalmente:

Puede cambiar temporalmente el modo de pantalla de la siguiente manera al oprimir la tecla de función de la derecha que aparece al ver las listas o seleccionar iconos del menú:

- **[MULTI]**: Múltiples entradas/todos los iconos del menú se muestran en una pantalla a la vez.
- **[SENCI.]**: Una entrada/un icono del menú se muestra en una pantalla a la vez, en caracteres grandes.

Nota:

- Al seleccionar **"Multi elemento"** como el modo de pantalla, es posible cambiar la pantalla para confirmar la información detallada al oprimir **[SENCI.]**.

■ Por medio de la programación:

Puede configurar de antemano la unidad para que siempre muestre un solo elemento o múltiples elementos al seleccionar **"Un elemento"** o **"Multi elemento"** como configuración del modo de pantalla.

Seleccione la configuración deseada:

- **"Multi elemento"**: Múltiples entradas/se muestran todos los iconos del menú en una pantalla a la vez.

– “Un elemento”: Una entrada/se muestra un icono del menú en una pantalla a la vez, en caracteres grandes.

La configuración predeterminada es “Multi elemento”.

1 [MENU] (centro del joystick) → **[⇐][1][9][2]**

2 [▼]/[▲]: Seleccione la configuración deseada. → **[GUARDA]**

3 [OFF]

Nota:

- Al seleccionar **[MULTI]** o “Multi elemento” como el modo de pantalla, es posible mover las pantallas al empujar el joystick a la derecha o la izquierda sin tener que desplazarse hacia arriba o abajo por la lista:
 - Empuje el joystick a la derecha para ir a la siguiente pantalla.
 - Empuje el joystick a la izquierda para volver a la pantalla anterior.

Para escuchar mensajes usando el auricular

Cómo escuchar mensajes en la lista de mensajes

Puede seleccionar el elemento que desea reproducir.

1 [MENU] (centro del joystick) → **[⇐][3][2][9]**

2 [▼]/[▲]: Seleccione el elemento deseado de la lista de mensajes. → **[REPRO.]**

- Puede borrar los mensajes seleccionados de la siguiente manera:
[BORRA] → **[▼]/[▲]: “sí”** → **[SELEC.]**

3 Cuando termine, oprima **[OFF]**.

Nota:

- Si ya se escuchó el elemento, aparece “✓” aunque se haya escuchado usando otro auricular.
- Si la unidad no puede recibir información del que llama, aparece “Msj .” en la lista de mensajes.
- Al reproducir un mensaje de la lista de mensajes, las operaciones de reproducción son las que se muestran a continuación:
 - Si oprime **[1]** o empuja el joystick a la izquierda, el mensaje que se está reproduciendo se vuelve a reproducir desde el principio.
 - Si oprime **[2]** o empuja el joystick a la derecha, la unidad detiene la reproducción del mensaje y la pantalla vuelve a la lista de mensajes.